

Connecting to a Water tank

Step 1	Fill and pressurize your water tank before connecting to the scaler
Step 2	Place the water tank and scaler on a flat and secure surface
Step 3	Locate the female quick disconnect on the water tank If you have problems finding it, please see the user manual provided by the manufacturer of the water tank
Step 4	Locate the male quick disconnect on the water line of the scaler
Step 5	Connect the male quick disconnect from the scaler with the female quick disconnect on tank

Note: Female quick disconnects are purchased separately.